

Operating Instructions

Electric Rice Cooker/Steamer Olla eléctrica para cocer arroz y conservarlo caliente

SR-SH15PW/SR-SH15PS



Panasonic_®

Before operating this unit, please read these instructions completely.

Antes de usar la marmita, lea estas instrucciones hasta el final.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following

- Read all instructions.
- 2 Do not touch hot surfaces Use handles or knobs.
- 3 To protect against electrical hazards do not immerse cord, plugs, and Rice Cooker, except lid and pan, in water or other liquid
- 4 Close supervision is necessary when any appliance is used by or near children.
- 5 Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6 Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- 7 The use of accessory attachments not recommended by the appliance manufacturer may cause hazards
- 8 Do not use outdoors.
- 9 Do not let cord hang over edge of table or counter, or touch hot surfaces
- Do not place on or near a hot gas or electric burner, or in a heated oven
- 11 Extreme caution must be used when moving an appliance containing hot oil or other hot liquids
- 12 Always attach plug to appliance first, then plug cord into the wall outlet To disconnect, turn any control to "off", then remove plug from wall outlet
- 13. Do not use appliance for other than intended use

14. SAVE THESE INSTRUCTIONS

This product is intended for household use.

NOTE

- A short power-supply cord (or cord set) is to be provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord
- B Longer cord set or extension cords are available and may be used if care is exercised in their use
- C If a long cord set or extension cord is used,
 - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance
 - (2) if the appliance is of the grounded type, the extension cord should be a grounding-type three-wire cord, and
 - (3) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally

This appliance has a polarized plug (one blade is wider than the other) As a safety feature, this plug will fit in a polarized outlet only one way if the plug does not fit fully in the outlet, reverse the plug if it still does not fit, contact a qualifies electrician Do not attempt to defeat this safety feature.

EXCILERY

ESPANOL

PARTS IDENTIFICATION	. 4
HOW TO USE	. 5
HOW TO CLEAN	
TO KEEP COOKED RICE WARM AND TASTY	
HOW TO STEAM FOOD	
SPECIFICATIONS	


CONTENIDO


CONTENTS
CAUTIONS.....


Precauciones	3
Identificacion de las partes	4
Como usar	
Como limpiar	R
Para mantener el larroz cocido caliente y guostoso	8
Forma de cocer al vapor alimentos	10
Spécifications	
-F	

- □Plug into properly wired wall outlet Before you plug in, make sure the voltage of the unit is the same as your local supply
- ☐ Enchute en un tomacornente de pared apropiadamente alambrado. Antes de enchutatio asegurese de que el voltaje de la unidad es el mismo que el de la corriente local.
- Set the unit on a stable surface

 Do not expose to water, high humidity or heat sources. Do not use the pan directly on an open flame, electric burner or in a heated oven.
 - □Coloque la unidad en una superficie estable
 No la exponge al agua, alta humedad o fuentes
 de calor No use la olla directamente sobre el fuege

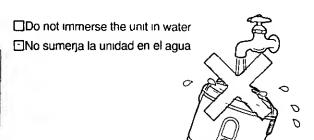





- ☐Do not tilt the rice-cooker on its edge or place it upside down with its power supply plug connected, as this may cause damage. When tilting or placing the rice-cooker upside down, make sure to disconnect the power supply plug.
- □No incline la cocedora de arroz sobre su borde ni la coloque el revés con su enchufe de alimentación conectado, ya que podria provocar daños. Antes de inclinar o colocar al reves la cocedora de arroz, cercioreso de desconectar el enchufe de alimentación.
- ☐Paper located between the pan and the heating plate should be removed before use
- El papel ubicado entre la olla y la placa para calentar debe ser removido antes de naar
- Always keep the outside bottom of the pan and the heating plate clean and dry. Any foreign matter between them will cause your cooker to malfunction
- Mantenga siempre el londo exterior de la olla y la placa para calentar limpias y secas Cualquier material extraño entre ambas causará el mal funcionamiento de la olla eléctrica



- ■Be sure to keep the cooker out of the reach of children, especially when cooking Serious injury could occur if the unit tips over and the hot contents are spilled Accidentally pressing the keys may stop the cooker
- Asegárese de mantener la olla eléctricaf uera del alcance de los ninos, especialmente al cocinar arroz Presionar accidentalmente la tecla suspenderia el tuncionam ento de la olla eléctrica

- The cooker becomes hot when in use Do not cover the lid with your hand or place your face directly over the steam coming from the cooker
- La olla se canienta cuando está en use No cubra la tapadera con su mano o coloque la cara directamente sobre el vapor que sale de la olla eléctrica



- ■Do not cover the lid with a cloth The lid may deform or change colour
- No cubra la tapadera con una tera La tapadera paeria deformarse o cambiar su color

PARTS IDENTIFICATION IDENTIFICACION DE LAS PARTES

Inner lid Tapa interior Dew collector Colector de rocio ☐Slide inner lid onto inner lid shaft. Face large ☐Hold the sides and remove/install in the direction rubber lip of centre packing towards outer lid of the arrows Small side of centre packing should face you ☐Remove and empty dew collector after every use when outer lid is open Deslice la tapadera interna en su eje. Coloque el ☐Sostenga los lados y remueva/Instale en la borde grande de caucho del envase central hecia dirección de la fiencha la tapadera externa El lado pequene del envase □Hemueva y vasie el colector de rocio despues central debe colocurse hecia ueted cuando la de cada uso tapadera externa esta abierto Centre packing Inner lid shaft Envase central Eje de la tapa interior Outer lid Tapa extenor Pan Recipiente "Keep Warm" lamp Body Scoop holder Lampanta calentando arroz Sujetapaleta Olla "Rice Cook" lamp Lamparita cociendo arroz





Measuring cup (approx 180 ml)

Taza medidora (aprox 180 ml)



Rice scoop

Paleta para
sacar el arroz



Scoop holder
Sujetapaleta

Switch

Interruptor



Steaming rack Placa de Measure rice with the measuring cup provided.

Rinse rice in a separate bowl until the water becomes relatively clear.





Do not rinse rice in the rice cooker pan.

Place rinsed rice in the pan. Add water.
e.g. For 6 cups rice, add water to LEVEL INDICATOR 6.



LEVEL INDICATOR
 MAXIMUM LEVEL
 Do not cook with more than this level of water.

Adjust the quantity of water to your personal taste.

Set the inner lid onto the outer lid. Place the pan in the body.

Make sure that the pan is directly in contact with the heating plate by turning it slightly from right to left until it seats properly.



Wipe the surface of the pan before use. If it is wet, it may cause noise while cooking. It may also damage the unit.

Close the outer lid.
The lid is locked properly when it clicks.



- If outer lid is not securely closed, cooking will be affected.
- Do not open the outer lid when in use.

Plug in.







If pan is not in the cooker, cooking will not begin.

ruined.

Do not plug in until you get ready to cook. Otherwise, rice may be

Immediately press the switch. The "Rice Cook" lamp tells you when cooking has started.


When rice is cooked, the switch will pop up,

- "Keep Warm" lamp lights to indicate
- "Keep Warm" function is working.



"Keep Warm" function continues until the unit is unplugged.

After switch pops up, leave the lid closed for at least 15 minutes to steam rice.

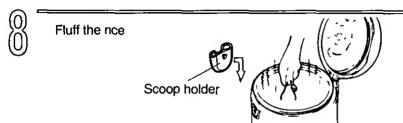

☐ The rice may be sticky if it is not fluffed



Unplug the AC cord if you do not want to keep the rice warm or when the unit is not in use



☐ Remove and clean dew collector after every use

HOW TO GLEAN

Unplug the unit before cleaning

- 1 Soak the pan and the inner lid in lukewarm water and wash with a sponge
- 2 Wipe the body with a damp cloth. Do not immerse the unit in water
- 3 The dew collector should be removed and cleaned after every use Do not use abrasive cleaners or steel wool. Clean with a non-metal brush or sponge

Non-stick coated pan

- Use a sponge to clean the pan
- Use a plastic or wooden rice scoop, not metal utensils may damage the surface of the pan
- ☐ The non-stick coating may discolour after long use

This will not affect the non-stick coating or cleanliness of the pan

Wash the cooker immediately after cooking with any seasoning

TO KEEP COOKED RICE WARM AND TASTY

- Rinse the nce thoroughly, in a separate bowl, until the water becomes relatively clear Excess starch is removed during rinsing
- Using Keep Warm function for more than 5 hours may cause discoloration or an objectionable odor in the rice
- If quantity of rice to be kept warm is less than 4 bowls the rice will gradually dry out and lose taste
- Utensils left in the pan during Keep Warm may affect the smell and taste of the rice

Medir el arroz con la taza medidora incluida. Una taza de arroz crudo proporciona aproximadamente 3 tazas de arroz cocido. Lavar el arroz en otro recipiente hasta que el agua se vuelva relativamente clara.






No lave el arroz en el recipiente de la olla, ya que el revestimiento que no se pega se puede dañar



Introduzca el arroz lavado en el recipiente Añada agua P ej , Para cocinar 6 tazas de arroz y añada agua hasta "6" de la INDICACION DE NIVEL DE AGUA



- INDICADOR DE NIVEL - NIVEL MAXIMO No cocer mas de esta cantidad Ajuste la cantidad de agua a su gusto

Coloque la olla en la base Asegúrese de que la olla está directamente en contacto con la placa para calentar, girándola lígeramente de derecha a izquierda hasta que ésta se asiente correctamente



Seque la superficie de la olla antes de usar Si esta mojada, podria causar ruido mientras cocina También podria dañar la unidad

Cierre la tapedora externa Asegurese de cerrar hasta suene




- Si la tapadera externa no esta firmemente cerrada, la cooclón se atectara
- ■No levante la tapadera externamintras está en uso

Enchufar al suministro de fuerza







No conectar hasta que el arroz este listo para cocer
De otra manera puede deteriorarse

Si el recipiente on esta dentro de la marmita, no comenzará la coccion

Inmediatamente presione el interruptor, La lámpara de la Olla Eléctrica le indica cuando ha empezado a cocinar

Cuando el arroz está hecho, el interruptor saitará hacia arriba La lámpare de Mantener Tibio (Keep Warm) se enciende para indicar que esa función está en operación ■La funcion de Mantener Tibio (Keep Warm) continua hasta que se desconecte

Después que el interruptor se mueva hacia arriba, dejar la marmita cubierta durante unos 15 minutos para que el arroz se sature de vapor



COMO LIMPIAR

Desenchufar antes de hacer la limpieza

- 1 Remueva y limpiee el colector de rocio despues de cada uso
- 2 No sumergir la marmita en el agua Fregarla con un paño humedo
- 3 El colector de roció y el sostén del cucharón deben sser removidos y limpiados despues de cada uso No usar detergentes abrasivos o estropajos metálicos. Limpiar con un cepillo no metálico o con una esponja


Olla con revestimiento de teflón.
☐Use una esponja para limpiar ☐Use un cucharón de arroz de plastico o de madera, no utensilios de metal que pudieran danar la superficie de la olla
□El revestimlento de teflon podria descolorarse despues de largo uso Esto no atectará su propledad sanitaria o de no pegarse

PARA MANTENER EL LARROZ COCIDO CALIENTE Y COSTOSO

- Enjuague el arroz con agua rápida y cabalmente El afrecho so remueve el enjuagado
- Usar la funcion de Mantener Tibio (Keep Warm) por más de 5 horas podria causar el descoloramiento y un olor objetable en el arroz
- Sila contidad de arroz para mantener tibio es menor de 4 Tazas llenas el arroz gradualmente se secará y perderá eabor
- ELos utensilios dejados dentro de la olla mientras se mantiene tibio podria afecter el color y el sabor del arroz


Measure 2 cups of water with the measuring cup provided
Then put the water into the pan

Place the steaming rack into the pan
Then put the food to be steamed on the
steaming rack, or place the contents to be
steamed in a bowl and place the bowl on
the steaming rack

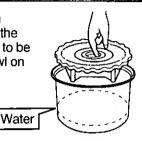

- Cooking time may be varied according to personal preference
- Less water means the unit will switch off sooner To lengthen cooking time, add 1 tbsp (15 ml) more water

Attach the inner lid onto the outer lid Place the pan inside the body Make sure that the pan is directly in contact with the heating plate by turning it slightly from right to left until it seats properly

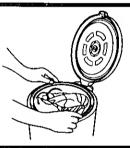


Wipe the surface of the pan before use If it is wet, it may cause noise while cooking It may also damage the unit

Close the outer lid
The lid is locked properly when it clicks.

- If the outer lid is not securely closed, cooking will be affected
- Do not open the outer lid when in use
- Connect the AC cord
 Press the switch immediately
 The "Rice Cook" indicator lamp will turn on to show the cooking (steaming) process has started
- Do not plug in until you get ready to cook Otherwise, food may be ruined
- If the pan is not in the cooker, cooking will not begin

- Time the cooking manually
 - *The unit will automatically switch to Keep Warm should water evaporate
 - *Remember that foods will continue to cook on Keep Warm There must be water in the pan

Turn off the cooker by unplugging Remove foods, then the steaming rack, and finally pour off the water



■ Remove and clean the dew collector and steaming rack after every use

Forma de cocer al vapor alimentos

Mida 2 tazas de agua con la taza de medir suministrada Luego coloque el agua en la olla Coloque el plato de coccion al vapor en El tiempo de coccion puede variar de acuerdo con los gustos el interior de la marmita personales ☐ Cuanto menos agua haya, más pronto se desconectará la alimentación de la unidad Para prolongar el tiempo de cocción, añada 1 cucharada Aqua (15 ml) más de agua 国Seque la superficie de la olla Coloque la olla en la base Asegurese de antes de usar Si está que la olla está directamente en mojada, podria causar ruido contacto con la placa para calentar, girándola lígeramente de derecha mientras cocina También a izquierda hasta que ésta se podría dañar la unidad asiente correctamente Si la tapadera externa no Cierre la tapedora externa está firmemente cerrada, la Asegúrese de cerrar hasta suene cooclon se atectará No levante la tapadera externamintras está en uso ■ No conectar hasta que el arroz esté listo para cocer De otra manera puede El indicador de "cocción del arroz" le deteriorarse señalara que se ha iniciado la cocción Si el recipiente on esta dentro de la marmita, no comenzará la coccion Controle manualmente la coccion *La unidad cambiara automáticamente a mantenimiento EN CALIENTE si se evapora el agua *Recuerde que la comida seguirá cocinándose en el modo de mantenimiento EN CALIENTE En la marmita deberá haber aqua Desenchufe la cocedora de arroz/al vapor Hemueva y limpie el colector de rdcio y la placa de vaporización Quite los alimentos, despues el plato de

daspues de cada uso

cocción al vapor, y finalmente vierta

el agua

		SR-SH15PW/SR-SH15PS
Power supply		120V AC
Power	at Rice Cook	630 W
consumed -	at Keep Warm	25 W
Capacity		0 36-1 5 L
Dimensions (HXWXD) (approx)		10 ¹ / ₂ "×11"×10 ² / ₄ " (26 5×28 0×27 5 cm)
Weight (approx)		3 1 kg (71/4 lbs)
Accessories		nce scoop, scoop holder, measuring cup, steaming rack (optional)

	Nº de modelo	SR-SH15PW/SR-SH15PS
	Alimentación	120V CA
	en Cocinera de Arroz	630 W
Consumo	en Mantener Tibio	25 W
	Capacidad	0,36-1,5 L
Dimensions (Al×An×Prf) (aprox)		10½"×11"×10¾" (26,5×28,0×27,5 cm)
Peso (aprox)		3,1 kg (71/4 lbs)
Accesonos		Paleta para sacar el arroz, Support de cuiller sujetapaleta, Taza medidora, Placa de vapor (opción)